

Product Description

Membrane material	TFC polyamide
MWCO	200 - 300 Da
Outer wrap	Net
Application	Demineralization and concentration of whey and lactose, whey and milk protein high concentrate.
Feature	Conform to 3A Standard

Membrane Characteristics

Product	Water Flux(LMH)	Salt Rejection(MgSO ₄)	Salt Rejection(NaCl)
Dairy-NF1	31	≥98%	/

Test Condition: 1) 2,000 ppm MgSO₄, 110 psi(7.6 bar), 77°F (25°C), 15% recovery.

2) The flux of one element may vary in the range of ± 25%.


Product Specifications

Product	Membrane area (ft ² /m ²)		
	Spacer 30 mil	Spacer 45 mil	Spacer 62 mil
8040	370 (34.4)	295 (27.4)	210 (19.5)
8038	370 (34.4)	295 (27.4)	210 (19.5)
6338	231 (21.5)	186 (17.3)	136 (12.6)
3840	80 (7.5)	65 (6.0)	46 (4.3)
3838	80 (7.5)	65 (6.0)	46 (4.3)

Operating and Design Information

Typical Operating Pressure	70 - 400 psi (4.8 - 27.6 bar)
Maximum Operating Pressure	600 psi (41.4 bar)
Maximum Temperature	Continuous Operation: 50°C(122°F) Clean-In-Place(CIP): 50°C(122°F)
Allowable pH	Continuous Operation: 2-10 Clean-In-Place(CIP): 1.8-11
Maximum Pressure Drop	15 psi (1.0 bar) Per Element 60 psi (4.1 bar) Per Vessel(4 in series)

Nominal Dimensions

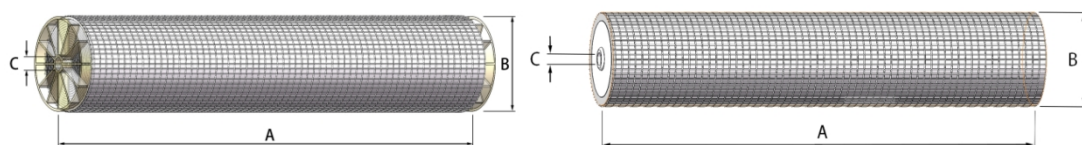

Products	Dimensions-(in/mm)		
	A	B	C
Dairy-NF1-8040-30/45/62-C-1125	40(1016)	7.9(200.7)	1.125(28.58)
Dairy-NF1-8038-30/45/62-C-1125	38(965)	7.9(200.7)	1.125(28.58)
Dairy-NF1-6338-30/45/62-C-1139	38(965)	6.3(160.0)	1.139(28.93)
Dairy-NF1-3840-30/45/62-C-0830	38.8(984)	3.8(96.5)	0.830(21.08)
Dairy-NF1-3838-30/45/62-C-0830	38(965)	3.8(96.5)	0.830(21.08)

Important information

- New spiral membranes must be cleaned prior to first use. The cleaning procedure should be in accordance with the instructions provided in the MEY cleaning description for the spiral membrane concerned.
 - The customer is fully responsible for the effects that any incompatible chemicals may have on the spiral membranes.
 - After initial wetting, the spiral membranes must be kept moist at all times.
 - If the operating specifications provided in this product description are not strictly followed, the limited warranty will be null and void.
 - To prevent biological growth during system shutdowns, MEY recommends that spiral membranes should be immersed in a protective solution.
 - Avoid permeate-side back pressure at all times.
 - MEY recommends using a rigid stainless steel ATD end device at the housing outlet end.
 - MEY recommends that the inner diameter of the housing should be approx. 2 mm (0.08") bigger than the outer diameter of the spiral membrane.
 - For storage conditions, please see Storage document.
 - For warranties, please see spiral membrane warranty document.
-

Operating guidelines

MEY recommends the following start-up procedure from standstill to operating condition:

- The unpressurized plant should be refilled with water.
 - Feed pressure should be gradually increased over a 30–60 second time scale.
 - Before initiating cross-flow at high permeate flux condition (start-up with high-temperature water) the set feed pressure should be maintained for 5–10 minutes.
 - Cross-flow velocity at the set operating point should be gradually achieved over a period of 15–20 seconds.
 - Temperature variations should be implemented gradually over a period of 3–5 minutes.
 - Avoid any abrupt pressure or cross-flow variations on the membranes during start-up, shutdown, cleaning or other sequences in order to prevent possible damage.
-

